


## *Styrepanel*

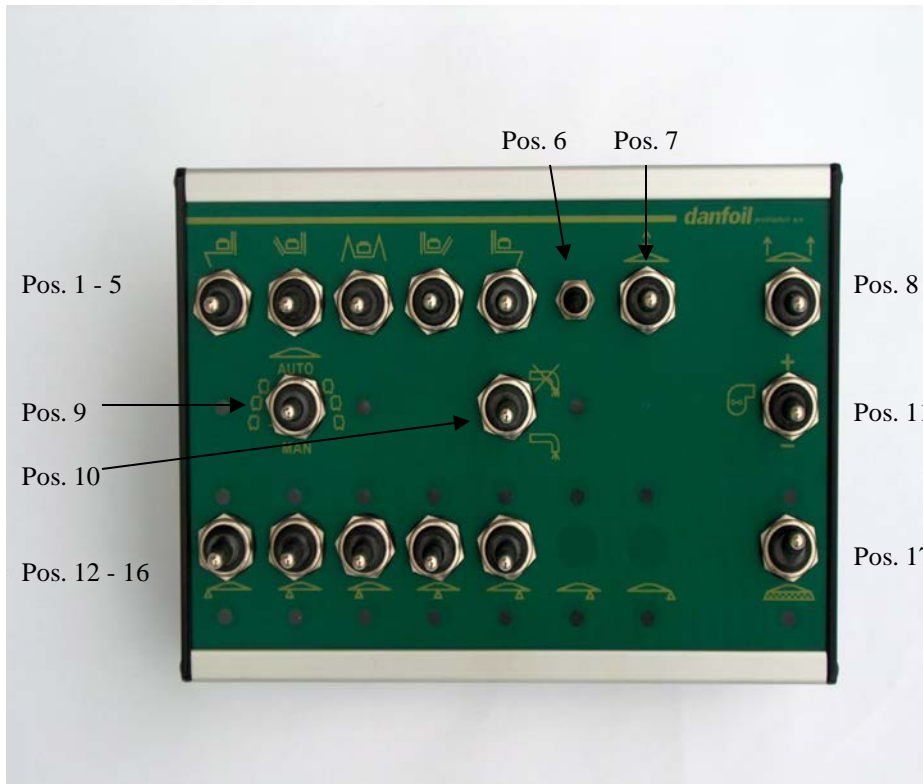

**Pos. 1** Hyd. funktion yderbom

**Pos. 2** Hyd. funktion inderbom

**Pos. 3** Alle funktioner ved ind- og udfoldning

**Pos. 4** Hyd. funktion inderbom

**Pos. 5** Hyd. funktion yderbom

- ved smal transportbredde skal pos. 2 og pos. 4 benyttes

**Pos. 6** Ikke aktiv

**Pos. 7** Hæve / sænke funktion, alle bomme skal enten være helt inde for transport eller helt ude for sprøjtning

**Pos. 8** Tilt, til korrekt bomføring

Pos. 8

**Pos. 9** Skum, Auto: skifter selv ved vending. Man: manuel skift

**Pos. 10** Rentvandspumpe aktiveres til gennemskyl af bom. Hovedpumpe skal være slukket

Pos. 11

**Pos. 11** Luftindstilling


**Pos. 12 - 16** Delbredder kan slukkes efter behov

**Pos. 17** Hovedbom til / fra, blæser starter / slukker

Ved transportstilling sørg for at bommene kun ligger på låseanordningerne og ikke hviler på dem

Ved ind- og udfoldning af bom sørg for at bommene er løftet helt i top

## *Styrepanel*

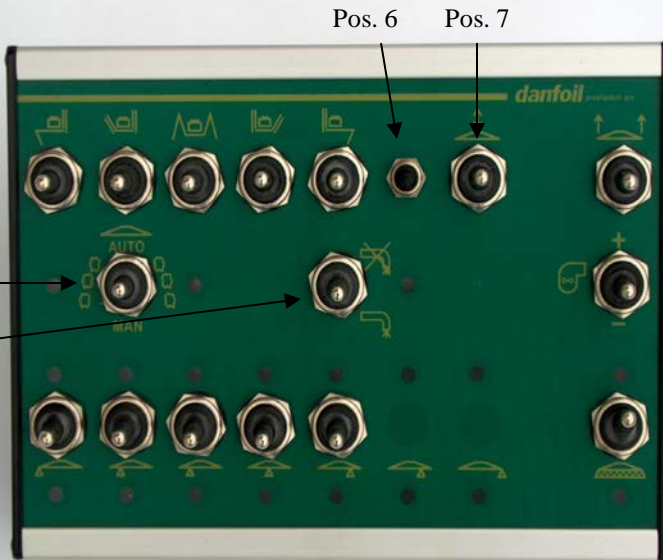

**Pos. 1** Left outer boom folding

**Pos. 2** Left inner boom folding

**Pos. 3** Both Left and Right boom folding

**Pos. 4** Right inner boom folding

**Pos. 5** Right outer boom folding

**Pos. 6** Not active

**Pos. 7** Adjust boom up/down

**Pos. 8** Adjust slant of boom

**Pos. 9** Foam, Auto: change side when sprayer on/off Man: manuel side shift

**Pos. 10** Clean water pump, Main pump must be switched off

**Pos. 11** Adjust air up/down

**Pos. 12 - 16** Sections can be turned on/off

**Pos. 17** Main section switch for entire boom on/off